

**IMPORTANT WARRANTY INFORMATION PLEASE READ
FILL OUT AND RETURN ENCLOSED WARRANTY CARD**

THIS WARRANTY COVERS:
LEM 44LB. Mechanical Scale #435
THE WARRANTY IS EXTENDED TO THE ORIGINAL PURCHASER ONLY

WARRANTY DURATION: This product is warranted to the original purchaser for a period of one (1) year from the original purchase date. **EACH UNIT COMES WITH A WARRANTY CARD, WHICH MUST BE FILLED OUT COMPLETELY AND RETURNED IMMEDIATELY, WITH A COPY OF THE PURCHASING RECEIPT. FAILURE TO RETURN YOUR WARRANTY CARD WILL LIMIT WARRANTY TO 90 DAYS WITH PROOF OF PURCHASE.**

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. The warranty is void if the product has been damaged by accident, misuse, neglect, modification or improper service or repairs by unauthorized personnel. It is also void if damaged in shipment or by other causes not arising out of defects in the materials or workmanship. This warranty does not extend to any units which have been in violation of written instructions furnished. This warranty covers only the product and its specific parts, not food or other products processed in it.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance under any theory of sort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability or breach of contract. The manufacturer declines all responsibility for damage to persons, things or animals arising from the failure to comply with the norms contained in this manual. The manufacturer reserves the right to make modifications at anytime to the models while maintaining the main characteristics described herein. The manufacturer also declines all responsibility for any errors in compiling this manual.

WARRANTY PERFORMANCE: During the above one year warranty period, a product with a defect will either be repaired or replaced after the product has been inspected by an LEM Service Technician. **LEM RESERVES THE RIGHT TO REFUSE WARRANTY PERFORMANCE OR PRODUCT EVALUATION UNLESS THE ORIGINAL SALES RECEIPT OR THE WARRANTY CARD IS ON FILE.** The repaired product will be in warranty for the balance of the one year warranty period. No charge will be made for such repair or replacement.

IMPORTANT NOTICE: If any parts are missing or defective, please contact our Customer Service Department for assistance at 877-536-7763 (M-F 8:30am to 4:30pm EST). **DO NOT RETURN TO THE STORE WHERE THE PRODUCT WAS PURCHASED.** LEM Products is not responsible for, or will cover under warranty, missing or damaged parts on discounted/clearance, resale or final sale items where the seller may not be able to guarantee full functionality or completeness of the unit.

LEM PRODUCTS MERCHANDISE RETURN POLICY WARRANTY SERVICE: To obtain service under terms of this warranty, please contact us at 877-536-7763 to obtain authorization prior to returning the merchandise. No merchandise will be accepted without prior authorization. Prior to returning the product for warranty repair the product must be thoroughly cleaned and free from any food particles or other debris. Failure of the purchaser to comply with this standard may result in the unit being returned without repair. In some cases, a \$50 cleaning surcharge may apply. Please return the product prepaid in the original packaging if possible, enclose a copy of your receipt, (keep a copy of your proof-of-purchase for your records) and include a written explanation of the issue. Ship to LEM Products, 4440 Muhlhauer Road, Suite 300, West Chester, OH 45011. LEM Products is not responsible for damage incurred in shipping, make certain to pack product properly. Return shipping charges are the responsibility of the purchaser. Packages returned to LEM should be insured for the value of the product to cover any damages that may occur during shipping.

Revised August 4, 2016

THE LEADER IN GAME PROCESSING



44LB. MECHANICAL SCALE

USE & MAINTENANCE

435



**1 YEAR
WARRANTY**

⚠ GENERAL WARNINGS AND SAFETY INFORMATION ⚠

IT IS IMPORTANT TO READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND SAFEGUARDS PRIOR TO USE

1. Always ensure that the appliance is properly assembled and safely set up before use.
2. The appliance is designed for domestic use and not for commercial purposes.
3. The manufacturer declines any responsibility in the case of improper use of this product. Improper use of this product voids the warranty.
4. Use on a level, stable surface to prevent tipping. Never move the appliance while in use.
5. Place items to be weighed onto the scale with care. Although the scale is designed to be durable, rough treatment may permanently damage the internal sensor.
6. The weight of the item should not exceed the capacity of the scale. Overloading the scale may cause damage.
7. Items should be placed on the center of the scale when being weighed.
8. Do not allow items to sit on scale platform for an extended amount of time. Doing so may have an adverse effect on the longevity and accuracy of the scale.

9. SAVE THESE INSTRUCTIONS

ASSEMBLY

Before using your mechanical scale for the first time, attach the tray onto the top of the scale.

Your scale has been shipped with a support in place to protect the scale against damage during shipping.

1. Remove the support from the scale.
2. Attach the Tray to the top of the scale using the supplied wing nuts.
3. **DO NOT** over-tighten the wing nuts; damage to the threads may occur.

HOW TO ZERO THE SCALE

After attaching the tray to the top of the scale, you may notice the needle on the dial is not in the ZERO position.

To ZERO the scale, simply turn the zeroing adjustment knob on the top of the scale either clockwise or counter-clockwise (depending on what direction the scale is off) until the needle is pointing on "0". When ZEROING the scale, make sure there is nothing on the tray — this will result in an inaccurate reading.

ALWAYS make sure the scale is on "0" before weighing an object.

Adjustment knob can also be used to zero out scale if a bowl or other object is used for weighing.

CLEANING

Clean with damp cloth and mild detergent.

Never immerse unit in water or other liquids.

PARTS DIAGRAM

