

**IMPORTANT WARRANTY INFORMATION PLEASE READ  
FILL OUT AND RETURN ENCLOSED WARRANTY CARD**

THIS WARRANTY COVERS:  
**LEM Big Bite®** Auto Patty Maker #687  
THE WARRANTY IS EXTENDED TO THE ORIGINAL PURCHASER ONLY

**WARRANTY DURATION:** This product is warranted to the original purchaser for a period of two (2) years from the original purchase date. **EACH UNIT COMES WITH A WARRANTY CARD, WHICH MUST BE FILLED OUT COMPLETELY AND RETURNED IMMEDIATELY, WITH A COPY OF THE PURCHASING RECEIPT. FAILURE TO RETURN YOUR WARRANTY CARD WILL LIMIT WARRANTY TO 90 DAYS WITH PROOF OF PURCHASE.**

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. The warranty is void if the product has been damaged by accident, misuse, neglect, modification or improper service or repairs by unauthorized personnel. It is also void if damaged in shipment or by other causes not arising out of defects in the materials or workmanship. This warranty does not extend to any units which have been in violation of written instructions furnished. This warranty covers only the product and its specific parts, not food or other products processed in it.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance under any theory of sort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability or breach of contract. The manufacturer declines all responsibility for damage to persons, things or animals arising from the failure to comply with the norms contained in this manual. The manufacturer reserves the right to make modifications at anytime to the models while maintaining the main characteristics described herein. The manufacturer also declines all responsibility for any errors in compiling this manual.

**WARRANTY PERFORMANCE:** During the warranty period, a product with a defect will either be repaired or replaced after the product has been inspected by an LEM Service Technician. LEM RESERVES THE RIGHT TO REFUSE WARRANTY PERFORMANCE OR PRODUCT EVALUATION UNLESS THE ORIGINAL SALES RECEIPT OR THE WARRANTY CARD IS ON FILE. The repaired product will be in warranty for the balance of the warranty period. No charge will be made for such repair or replacement.

**IMPORTANT NOTICE:** If any parts are missing or defective, please contact our Customer Service Department for assistance at 877-536-7763 (M-F 8:30am to 4:30pm EST). **DO NOT RETURN TO THE STORE WHERE THE PRODUCT WAS PURCHASED.** LEM Products is not responsible for, or will not cover under warranty, missing or damaged parts on discounted/clearance, resale or final sale items where the seller may not be able to guarantee full functionality or completeness of the unit.

**LEM PRODUCTS MERCHANDISE RETURN POLICY WARRANTY SERVICE:** To obtain service under terms of this warranty, please contact us at 877-536-7763 to obtain authorization prior to returning the merchandise. No merchandise will be accepted without prior authorization. Prior to returning the product for warranty repair the product must be thoroughly cleaned and free from any food particles or other debris. Failure of the purchaser to comply with this standard may result in the unit being returned without repair. In some cases, a \$50 cleaning surcharge may apply. Please return the product prepaid in the original packaging if possible, enclose a copy of your receipt, (keep a copy of your proof-of-purchase for your records) and include a written explanation of the issue. Ship to LEM Products, 4440 Muhlhauer Road, Suite 300, West Chester, OH 45011. LEM Products is not responsible for damage incurred in shipping, make certain to pack product properly. Return shipping charges are the responsibility of the purchaser. Packages returned to LEM should be insured for the value of the product to cover any damages that may occur during shipping.

Revised October 31, 2019



# BIG BITE® AUTO PATTY MAKER

## USE & MAINTENANCE

#687



**2 YEAR  
WARRANTY**

## ⚠ GENERAL WARNINGS AND SAFETY INFORMATION ⚠

### IT IS IMPORTANT TO READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND SAFEGUARDS PRIOR TO USE

1. Read and refer to the instructions and safety warnings that came with your Big Bite Grinder prior to use of this attachment.
2. Always ensure that the appliance is properly assembled and safely set up before use.
3. **DO NOT** leave the appliance unattended if it can be switched on and operated.
4. **CAUTION:** This appliance is not recommended for use near or by children or persons with certain disabilities. Set up and store the appliance out of reach of children. When not in use, store device in a secure and dry place out of reach of children.
5. Never feed food into product by hand as serious injury may occur, always use your stomper.
6. The appliance is designed exclusively for domestic use and not for commercial purpose.
7. **DO NOT** use the appliance on bones, deep frozen food, hard items or non-food items.
8. Use the appliance with the supplied accessories only. **WARNING:** The use of attachments not recommended or sold by the manufacturer may cause injury, damage to personal property, and may void your warranty.
9. **WARNING:** Do not use while under the influence of alcohol or drugs (prescription or non-prescription) as these may impair user's ability to properly assemble or safely operate the appliance.
10. Avoid contacting moving parts. Wait until all parts have come to a complete stop and disconnect from the power source before removing any parts of the appliance.
11. Thoroughly wash all parts in warm soapy water prior to use.
12. Tie back loose hair and clothing. Remove neckties, rings, watches, bracelets or other jewelry before operating.
13. Use on a level, stable surface to prevent tipping. Never move the appliance while in use.
14. **DO NOT** use the appliance for other than intended use.
15. Keep your work area clean and well lit. Cluttered work benches and dark work areas may cause accidents or injury.
16. **DO NOT** attempt to disable any of the safety features that are in place. They are there for your safety.
17. The manufacturer declines any responsibility in the case of improper use of this product. Improper use of this product voids the warranty.
18. Failure to follow warnings and a safety information could result in death serious bodily injury and or property loss.
19. **WARNING:** The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood by the operator that common-sense must be used.

## 20. SAVE THESE INSTRUCTIONS

## BEFORE USING

1. Disassemble and clean all the surfaces thoroughly.
2. Unscrew the three locking knobs that secure the clear top plate to the body of the Auto Patty Maker.
3. With the components separated, clean all surfaces thoroughly with soap and hot water or in the top rack of your dishwasher.

## REASSEMBLY

1. Place the slider on the Auto Patty Maker, making sure the top side of the slider is facing up. The bottom of the slider is completely flat.
2. Place the clear top plate over the slider, aligning the holes for the locking knobs.
3. Hand tighten all locking knobs to secure the clear top plate. **DO NOT** over tighten. **DO NOT** use tools to tighten locking knobs.

## ATTACHING TO GRINDER

1. Your Auto Patty Maker comes with a set of four adapter tubes. Using the retaining ring from your grinder, choose the tube that fits your machine. The tube will fit inside the retaining ring just like a regular stuffing tube.
2. With the proper tube in place, attach the retaining ring to the grinder. Be sure the slot on the tube is facing down.  
Note: On your grinder, install either the stuffing plate/spacer or the knife and cutting plate.
3. With the retaining ring tightened snugly, slide the mouth of the Auto Patty Maker over the tube end, aligning the groove in the Auto Patty Maker with the slot on the tube. This will ensure that the clear plastic side is facing up.
4. Tighten the locking knob on the underside of the Auto Patty Maker firmly. **DO NOT** over-tighten the locking knob. **DO NOT** use tools to tighten the locking knob.

## MEAT GRINDER OPERATION

1. With the Patty Maker attached to your grinder, position the patty-forming slider all the way to the right or left.
2. Slowly begin feeding meat into the grinding head. Watch through the clear top plate as the patty chamber begins to fill.
3. When the patty chamber is completely full, push the patty forming slider to the opposite side.
4. Be ready to catch the perfectly formed patty as it drops from the well.
5. As the first patty drops into your hand, the next patty will already start forming.
6. Repeat this motion while continually adding meat to the grinder.
7. Do not feed the grinder faster than you can eject and stack your patties. If the patty-forming chamber overfills, meat will begin to push between the slide and the body of the Auto Patty Maker.

## CLEANING

1. Disassemble the Auto Patty Maker.
2. Clean all components thoroughly with hot water and mild detergent.
3. Do not scour the clear top plate.
4. The Auto Patty Maker is top rack dishwasher safe.

**After cleaning, make sure the Auto Patty Maker is thoroughly dried before storing.**